

PR9打印机驱动安装操作说明

请按以下步骤来安装打印机驱动:

1. 点击Windows界面左下角的“开始”图标
2. 点击“打印机和传真”，或“控制面板” → “打印机和传真”
3. 点击“添加打印机”，然后按提示操作 (**注意**: 在“安装打印机软件”步骤, 点击“从磁盘”，然后找到PR9.inf所在的目录并选择PR9.inf)
4. 安装后, 可以选择打印机的端口:
 - a) 在 “打印机和传真”中, 点击鼠标左键选中“Nantian PR9”打印机驱动
 - b) 点击鼠标右键选中“属性”
 - c) 点击“端口”, 可以选择串口 (Comx), 并口 (LPTx), USB等端口, 但选中的端口要与打印机菜单参数设置的端口一致. (**注意**: 如果选择了串口, 在“配置端口” → “数据流控制”中, 一定要设置为 “Xon/Xoff” 或 “硬件” (推荐使用 “Xon/Xoff”), 否则会出现打印内容不完整和乱码)

PR9 Printer Driver Installation Operation

Please follow the steps below to install printer driver:

1. Copy all files of printer driver to one directory, for example, D:\PR9 driver
2. Click “Start” at the lower left corner of the Windows
3. Click “Printer and FAX” , or “Control Panel” → “Printer and FAX”
4. Click “Add Printer”, follow the instructions (**Note**: in step “Install printer driver software”, click “From Disk”, then select PR9.inf)
5. After installation, you can change printer driver’s port/interface:
 - a) Click left button of the mouse to select “Nantian PR9” driver in “Printer and FAX”
 - b) Click right button of the mouse to select “Properties”
 - c) Click “PORT”, then you can set serial, parallel or USB port according to the menu configuration of your printer (**Note**: if serial port is selected, “PORT Configuration” → “Data Flow Control” must be “Xon/Xoff” or “Hardware”(Xon/Xoff is recommended); otherwise printout will be uncompleted and incorrect)