

选择通过驱动开钱箱功能图示



注:

NO Cash Drawer :不开钱箱.

Cash Drawer Before Printing :打印之前开钱箱.

Cash Drawer After Printing :打印之后开钱箱.