

1. Run tftpd32.exe. See figure 1.

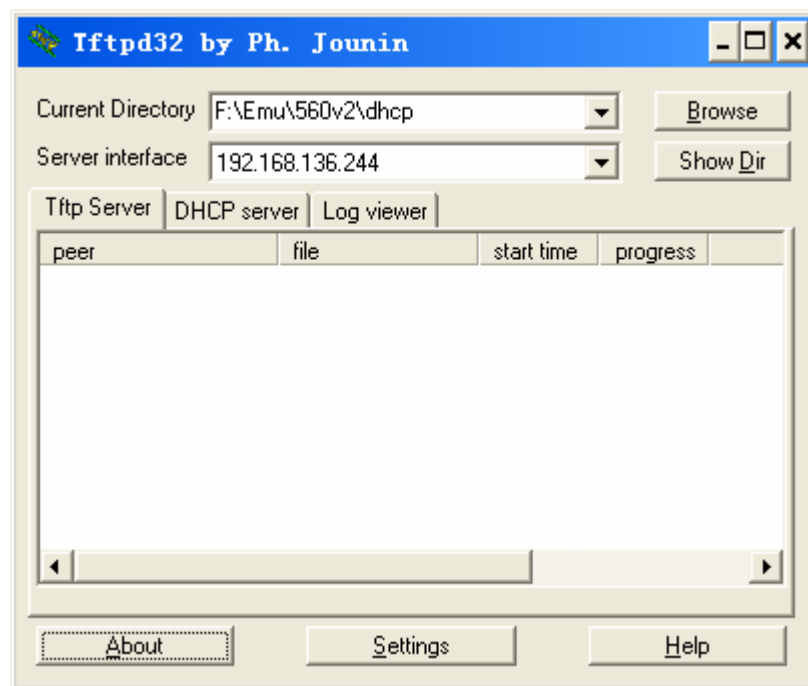


Figure 1

2. Click "Settings" button and Activate property-page "GLOBAL", Make sure checkbox "DHCP Server" in checked state. See figure 2.

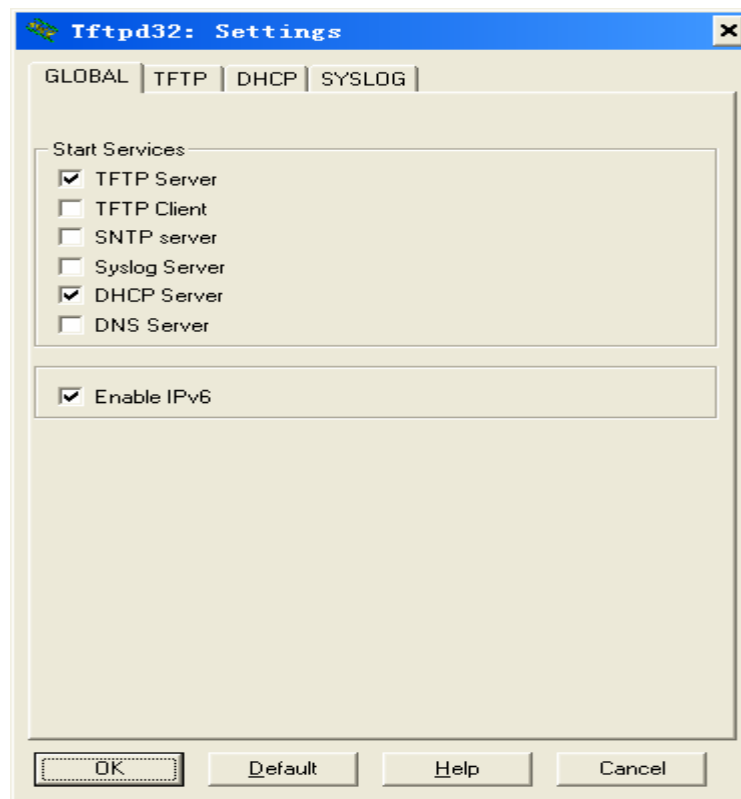


Figure 2

3. Activate property-page “DHCP”, locating textbox “IP pool starting address” in groupbox “DHCP Pool definition”, then input a IP address as the start address of DHCP allocating range. the default value is 192.168.136.200, you should change this value according to your network setting. See figure 3.

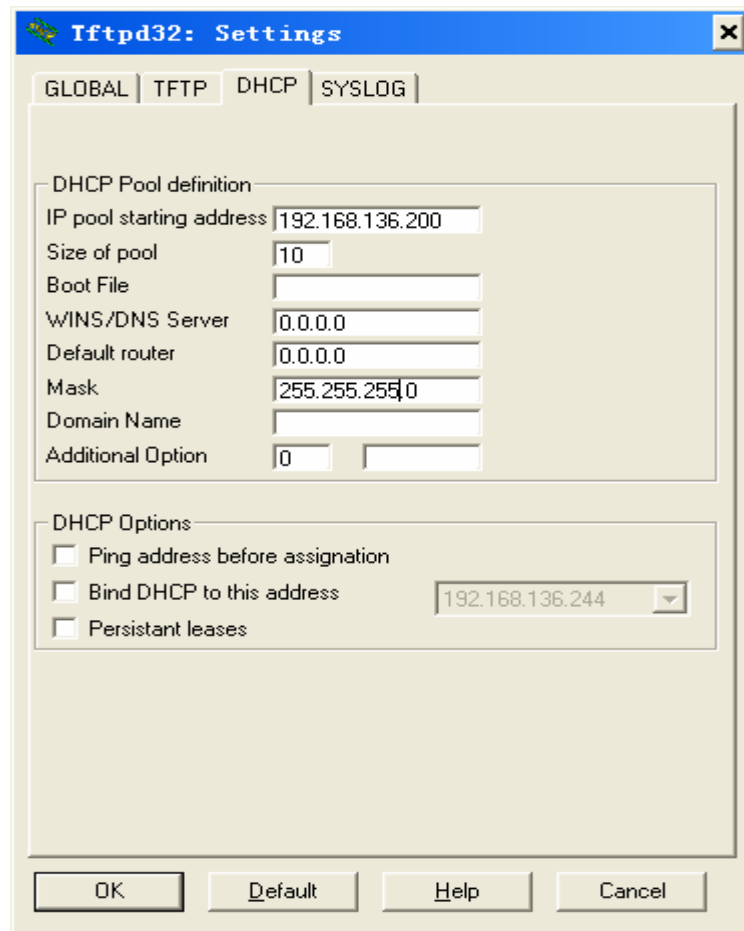


Figure 3

4. Locating textbox “Size of pool” in groupbox “DHCP Pool definition”, then input a count as maximum allocable count from DHCP. the default value is 10, you should set this value to actual count of emulators your own. See figure 3.
5. Locating textbox “Mask” in groupbox “DHCP Pool definition”, then input a subnet mask. See figure 3.
6. Keep remains to default.